

Lenovo

Overview - ThinkPad R50e

▼ Applicable countries and regions



Features and specifications

Processor	Intel Mobile Pentium M at 1.5GHz, 1.6GHz, 1.7GHz, or 1.8GHz Intel Mobile Pentium M 705, 715, 725, 735, or 745 Intel Mobile Celeron M at 1.2GHz or 1.3GHz Intel Mobile Celeron M 320(1.3GHz), 330(1.4GHz), 340(1.5GHz), 350(1.3GHz), or 360(1.4GHz)
Memory	256MB or 512MB and supports up to 2GB maximum memory
Hard drive	30GB, 40GB, or 60GB sizes
Display	14.1" TFT or 15.1" TFT display
Graphics	32MB Intel 855GM video chipset
CD and DVD drive	CD, DVD, or CD-RW/DVD drives
Networking	Integrated 802.11bg wireless (select models)
Security	Locking device
Battery	Lithium Ion in a 6 cell configuration
Operating System	Microsoft Windows XP
ThinkVantage Technologies	ThinkVantage Technologies help our customers become more competitive by delivering industry-leading capabilities that improve productivity and reduce cost. ThinkVantage Technologies include features such as deployment, backup, security (select models) and more.
Detailed specifications	All specifications for the ThinkPad R50e system

Note: Specifications are dependent on the machine type and model

- [View original components included with a system](#)
- [View in-depth technical information about the system you are currently using](#)

Warranty

Parts exchange, depot repair, or on-site service depending on machine type
1 year for the system
1 year for the battery

- [View warranty status for a machine](#)
- [Warranty information and service upgrades](#)

For additional warranty information, refer to the [statement of limited warranty](#).

System locations, ports, and features

- [Views](#)
- [Status indicators](#)
- [Function \(Fn\) key combinations](#)

Additional product information

- [Software and device drivers](#) - Relevant downloads and drivers for your system
- [Troubleshooting](#) - Step-by-step instructions for solving common computer issues
- [Hardware removal and installation](#) - Instructions for removing or installing options and service parts

Manuals

- [Hardware Maintenance Manual](#) - Information regarding hardware installation and removal, diagnostics, hardware interfaces, and replacement (FRU) part numbers

Option parts

- [Memory](#)
- [Hard drive, CD, and DVD drive](#)

Service parts

- [System](#)
- [Display](#)
- [Keyboard](#)
- [Recovery CD](#)

Applicable countries and regions

Worldwide

▲ [Back to top](#)

Document id: MIGR-54877

Last modified: 2005-10-05

Copyright © 2006 IBM Corporation

Copyright © Lenovo 2006, all rights reserved